


trk	Track'	+Tail
01	3368	5864
02	3306	5865
03	3389	5989
04	3437	6086
05	3460	6175
06	3407	6268
07	3566	6322
08	3504	6402
09	3620	6358
10	3245	6318
11	3266	6401
12	3061	6270
13	2944	6124
14	2733	6095
15	2619	5993
16	2455	5864
17	3207	5776

trk	Track'
18	2723
19	2724
20	2717
21	2741
22	2650
23	2691
24	2667
25	2777
26	2877

**REVISED  
APRIL 17TH 2005**

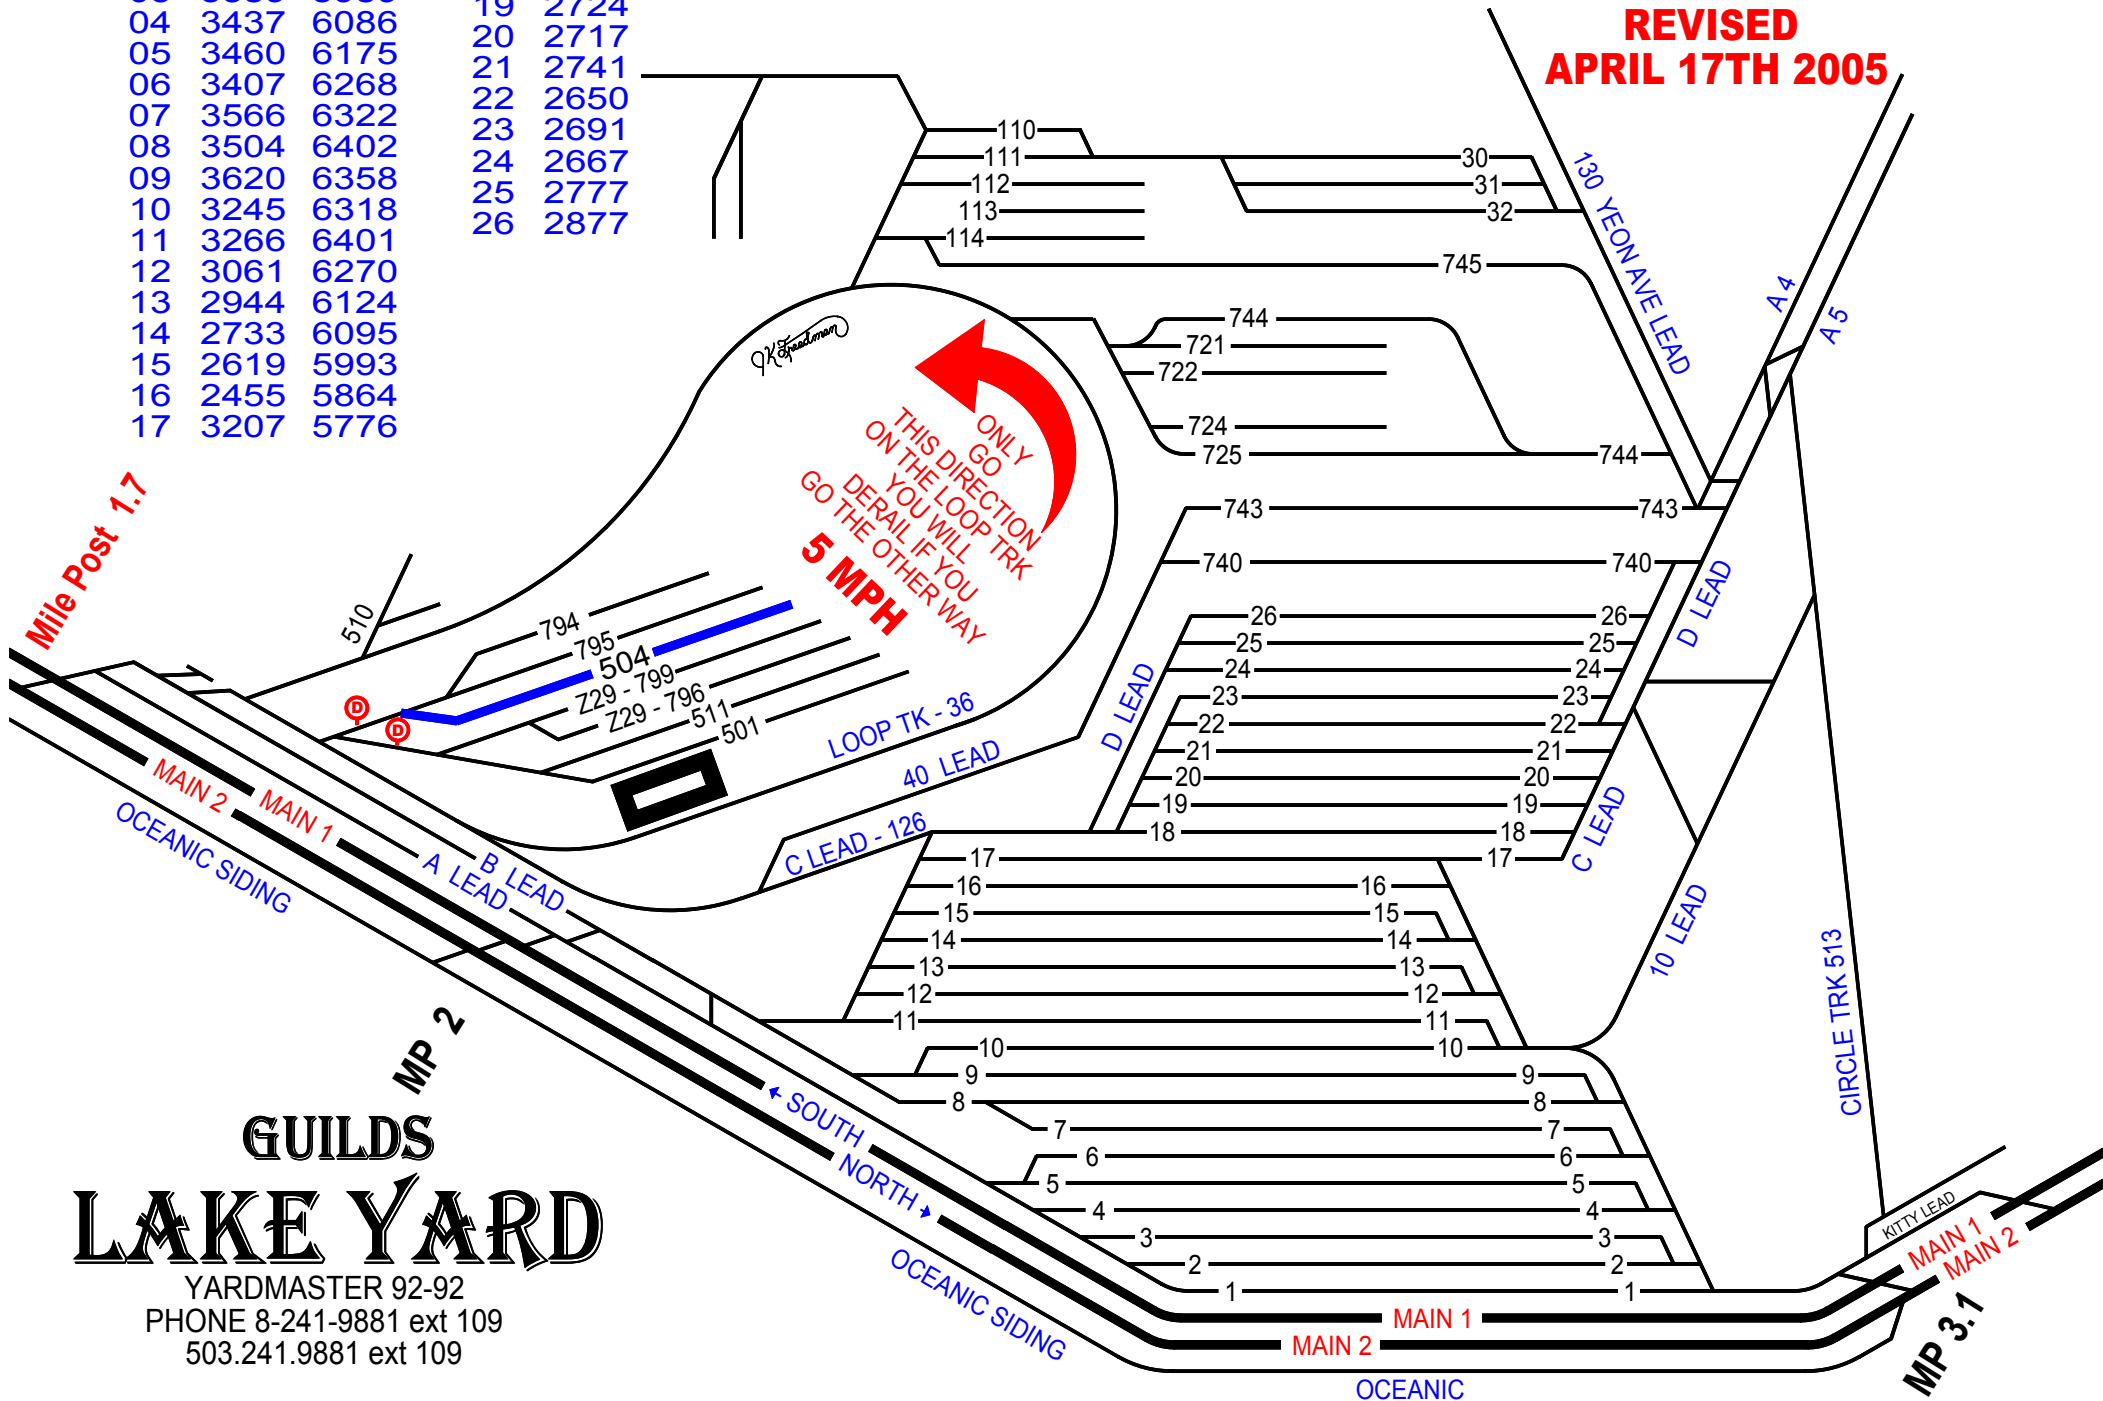

# GUILDS LAKE YARD

YARDMASTER 92-92  
PHONE 8-241-9881 ext 109  
503.241.9881 ext 109

Mile Post 1.7

MP 2

MP 3.1

# REVISED APRIL 25TH 2004


**( Albina / Brooklyn ) to Lake** Before Leaving BROOKLYN YARD MP 767.8, or ALBINA YARD MP 1.6

- (1) Call Lake Yard 92-92 503.241.9881 EXT 109 Get Depot trk thru Union Station and where to enter Lake Yard
- (2) Call UP Sandy Disp 27-27 Let him know ID and Route (Depot trk at Union station )
- (3) Call Steel Bridge Opr 27-27 503.249.2292 Let him know ID, Direction and Route
- (4) Call Vancouver Terminal Disp 76-76 503.249.2668  
Let him know ID, Direction, Route and where entering Lake Yard

YOU NEED  
BN WARRANTS

**Lake Yard to ( Albina / Brooklyn )** Before Leaving LAKE YARD MP 1.7 or MP 2

- (1) Call Albina TWR 38-38 503.249.2547 See if they can take you
- (2) Call Lake Yard 92-92 Get Route to leave (Depot trk) and where leaving yard at
- (3) Call Vancouver Terminal Disp 76-76 Let him know ID, Direction and Route (Depot trk)
- (4) Call UP Sandy Disp. 27-27 Give ID and Route (depot trk)
- (5) Call Steel Bridge Opr 27-27 503.249.2292 Let him know ID, Direction and Route

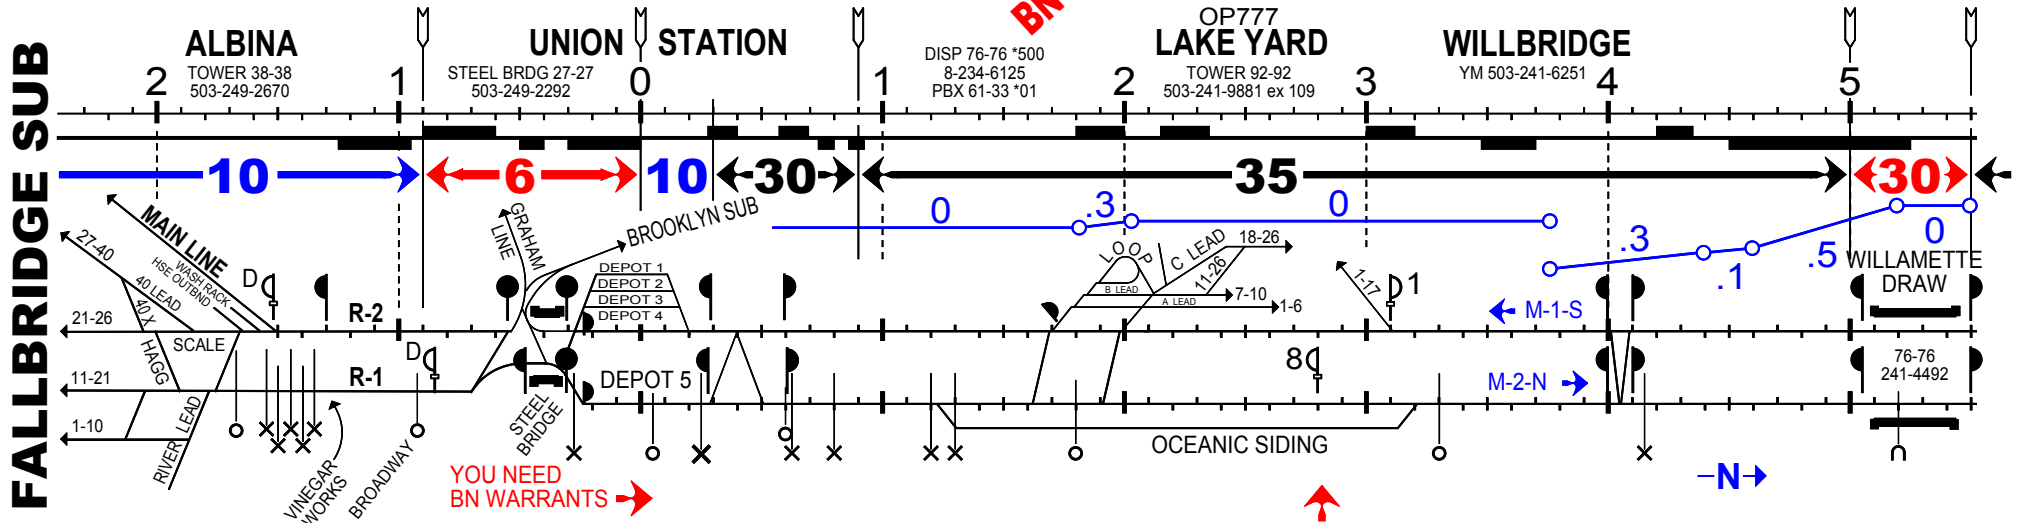

↑  
SIGNALS ARE  
WRONG IN THIS AREA  
HAVE NOT HAD TIME TO RESEARCH  
AND VERIFY

