

MOJAVE SUB NORTHBOUND

0940

page 1 of 2

Throttle Modulation

Dynamic Braking

Automatic Braking





Dynamic & Automatic Braking

Submit Suggestions and Corrections
to www.Fogchart.com

- █ DETECTOR TALKER (ALWAYS TALKS)
Located at MP xxx.2
- DETECTOR TALK ON DEFECT ONLY
Located at MP xxx.5
- ↑ PRIVATE ROAD CROSSING
- ↑ PUBLIC ROAD CROSSING
- A AEI READER
Located at MP xxx.3
- █ Tunnel No.17



REFERENCE ONLY
For Learning Purposes
Mistakes GUARANTEED

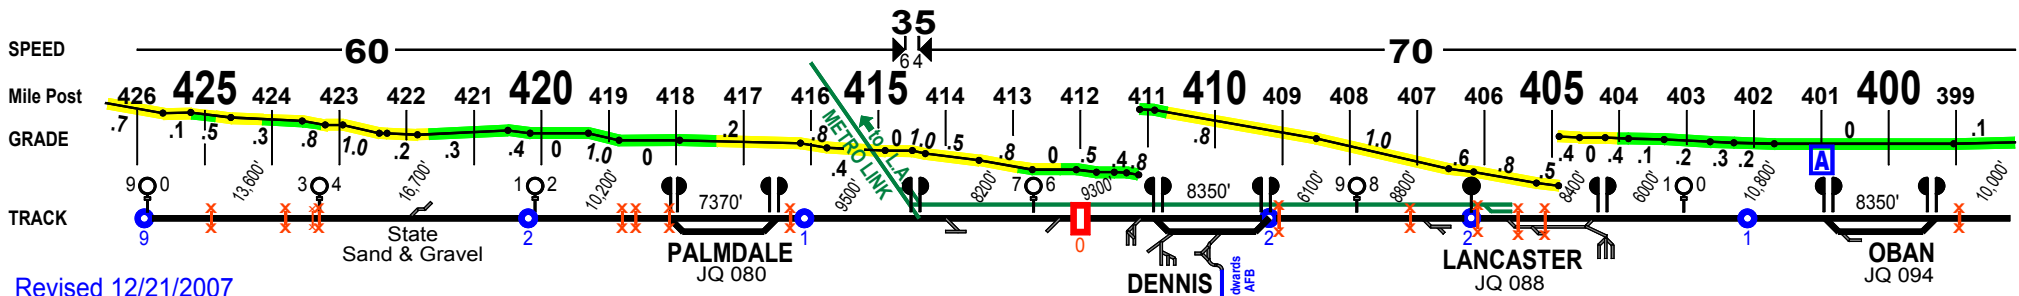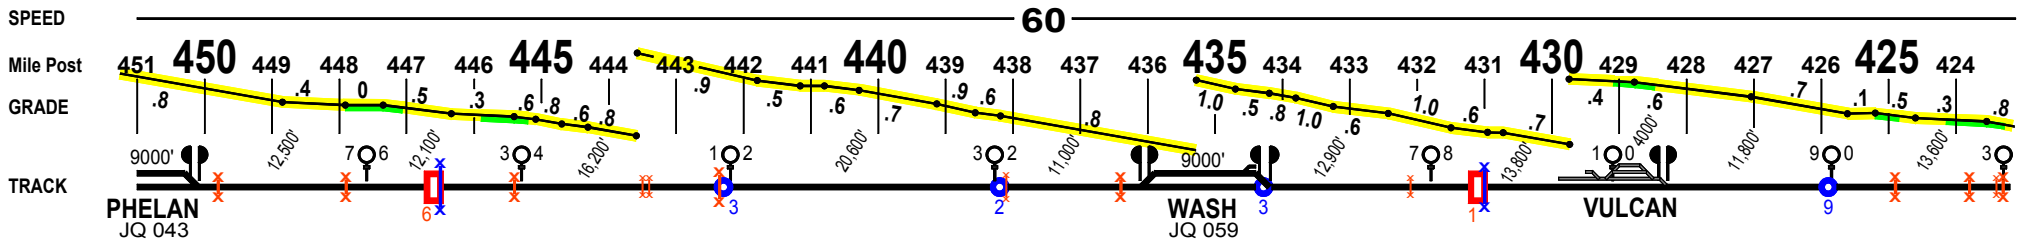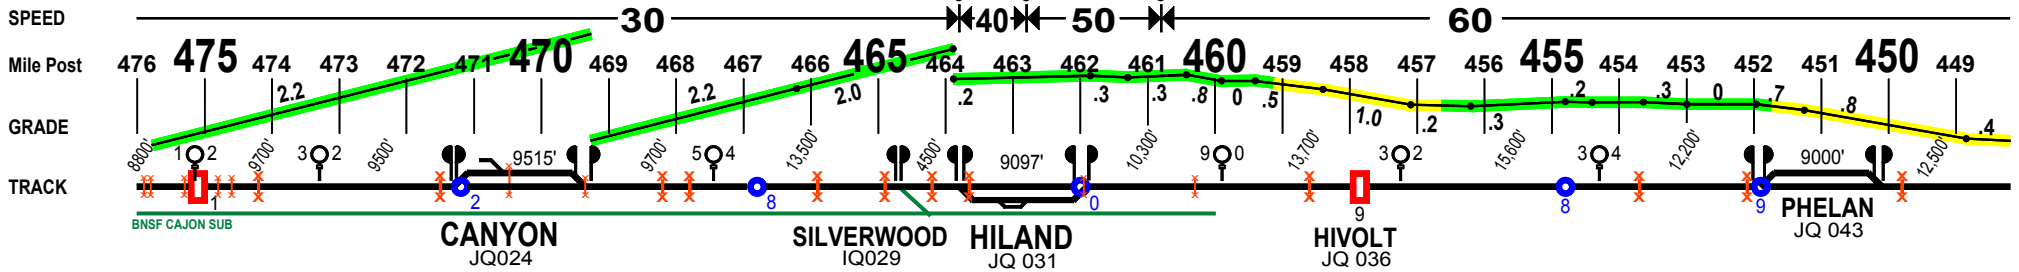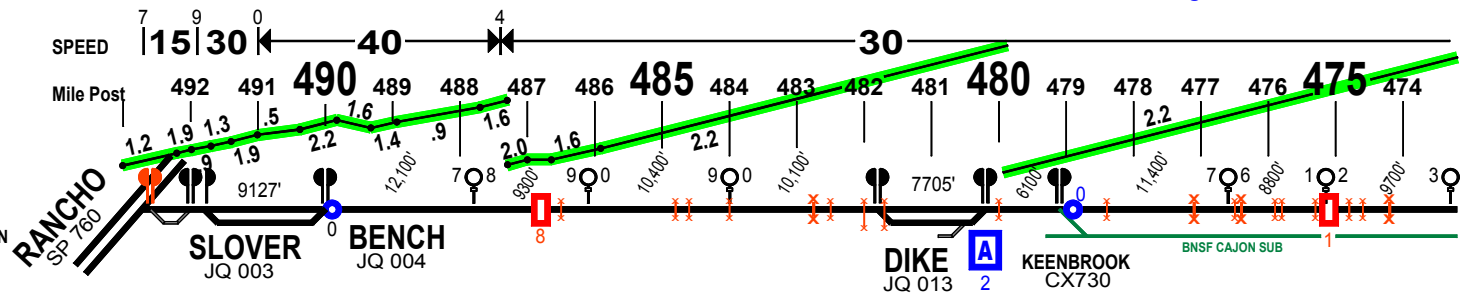





MOJAVE SUB NORTHBOUND

0940

page 2 of 2

Throttle Modulation Dynamic Braking Automatic Braking Dynamic & Automatic Braking

REFERENCE ONLY
For Learning Purposes
Mistakes GUARANTEED

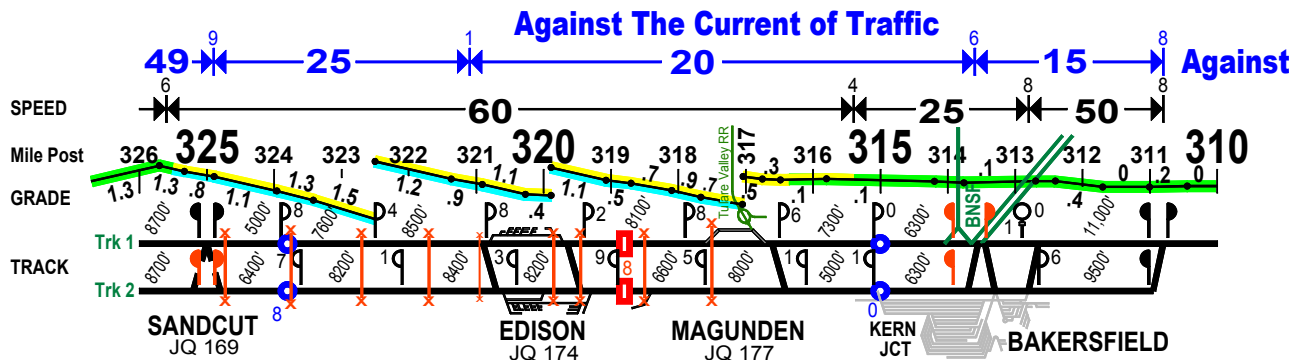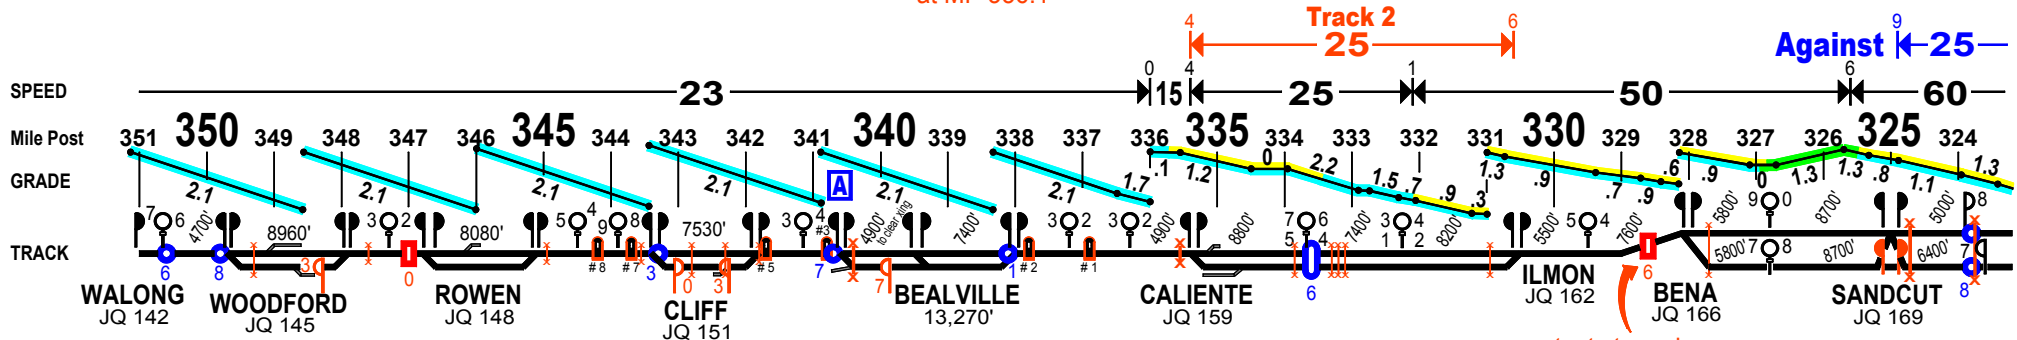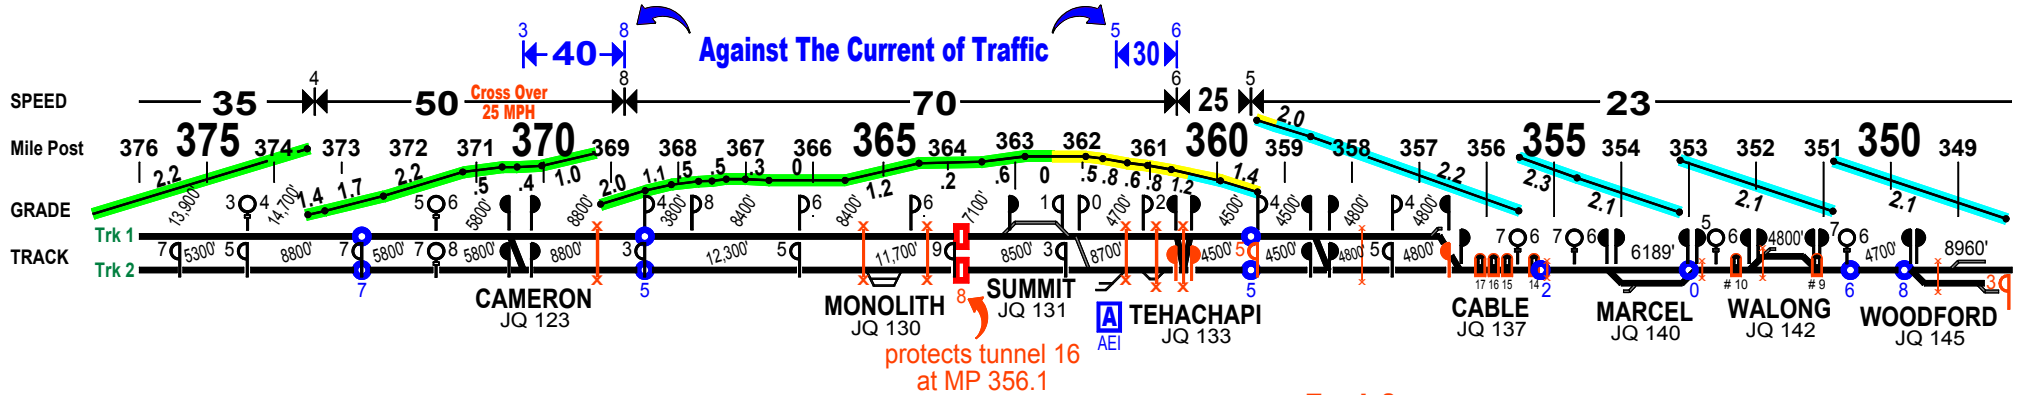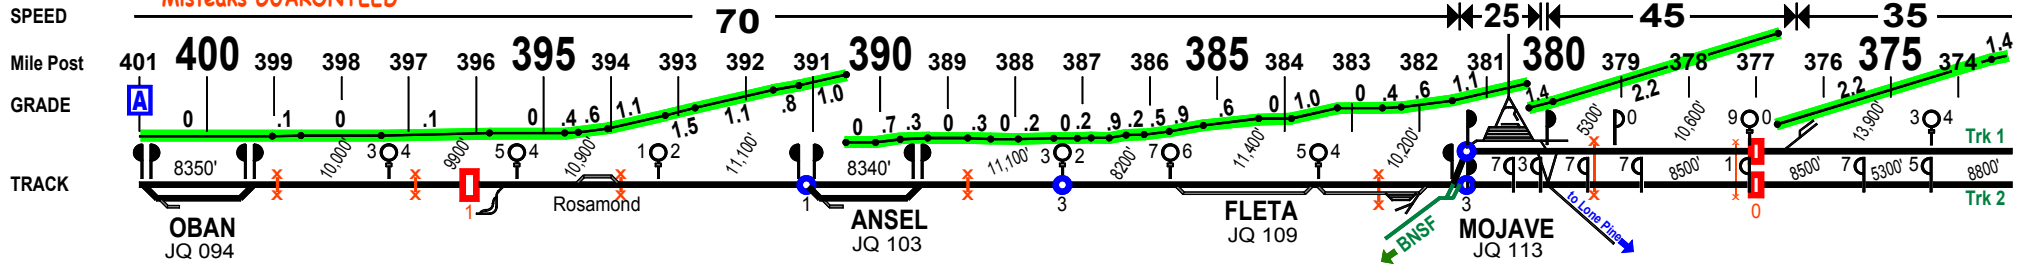

- 2 DETECTOR TALKER (ALWAYS TALKS)
Located at MP xxx.2
- 5 DETECTOR TALK ON DEFECT ONLY
Located at MP xxx.5
- ↑ PRIVATE ROAD CROSSING
- ↑ PUBLIC ROAD CROSSING
- A AEI READER
Located at MP xxx.3
- #17 Tunnel No.17

Revised 12/21/2007

MOJAVE SUB SOUTHBOUND





page 1 of 2

Throttle Modulation Dynamic Braking Automatic Braking Dynamic & Automatic Braking

- █ DETECTOR TALKER (ALWAYS TALKS)
Located at MP xxx.2
- DETECTOR TALK ON DEFECT ONLY
Located at MP xxx.5
- ↑ PRIVATE ROAD CROSSING
- ↑ PUBLIC ROAD CROSSING
- ▢ AEI READER
Located at MP xxx.3
- ⌋ Tunnel No.17



REFERENCE ONLY
For Learning Purposes
Mistakes GUARANTEED

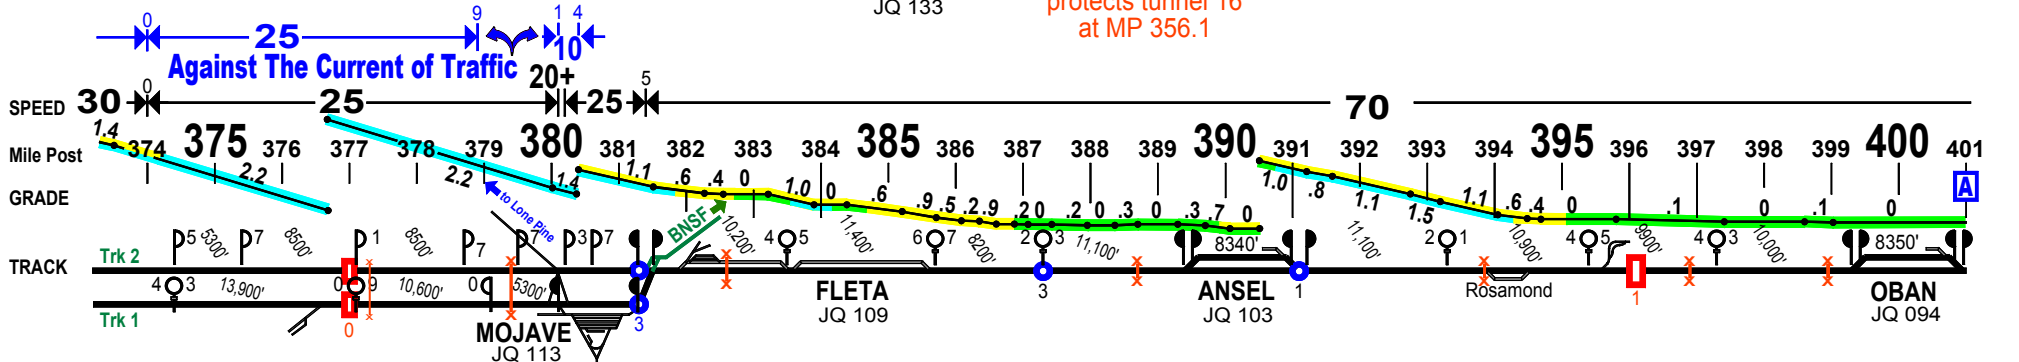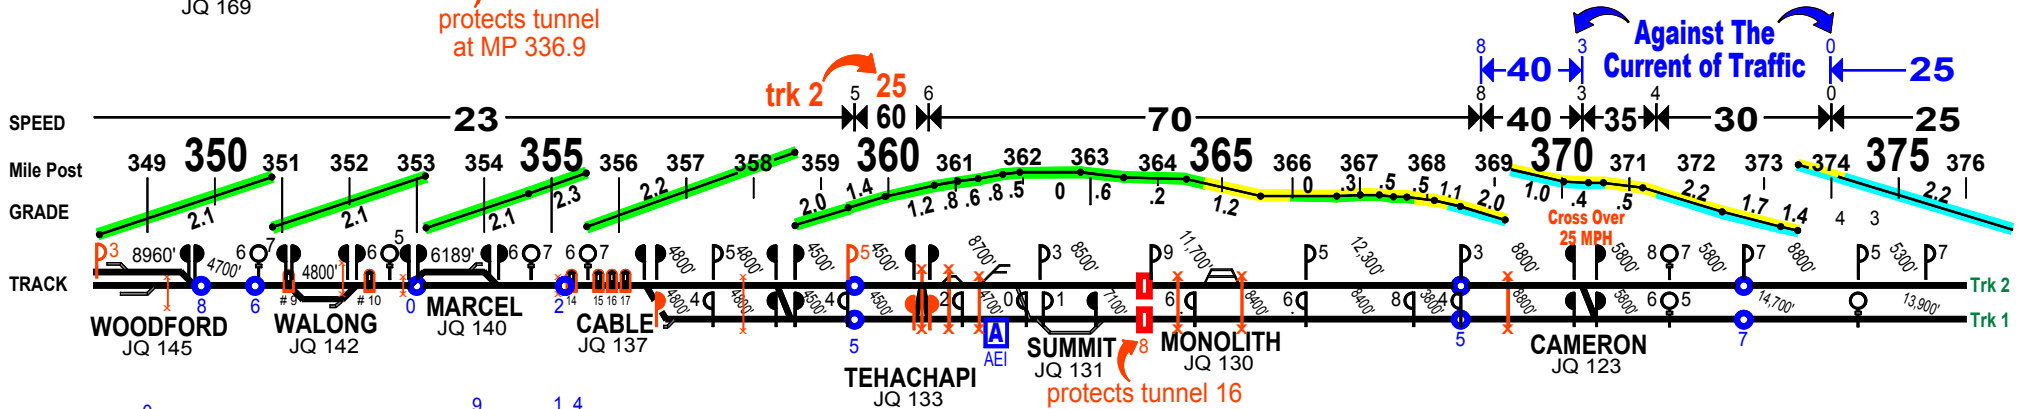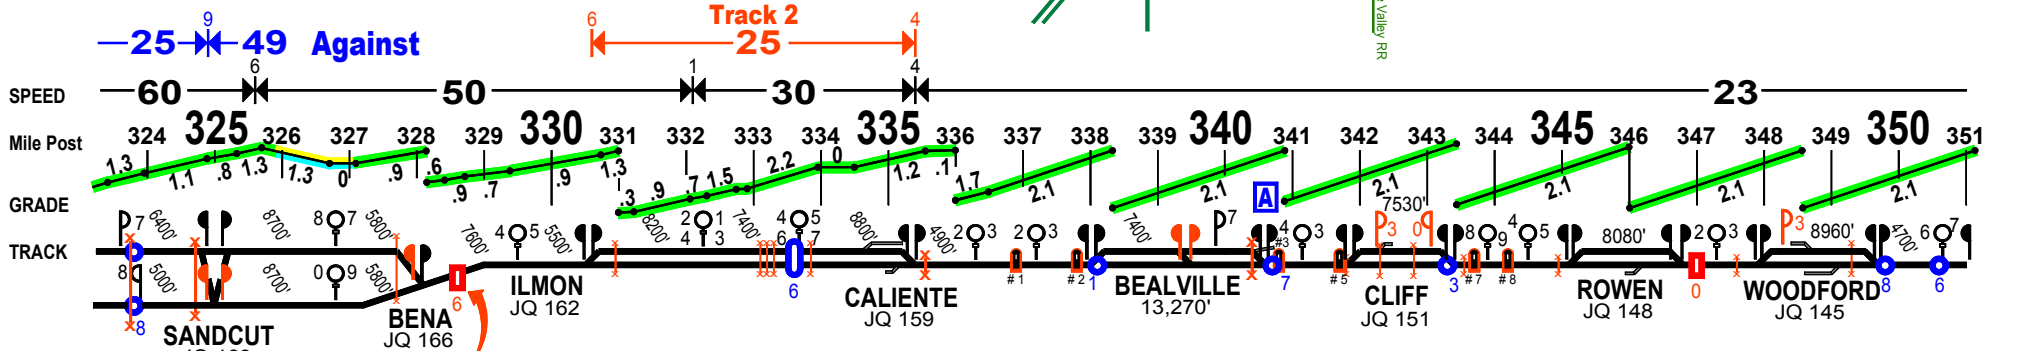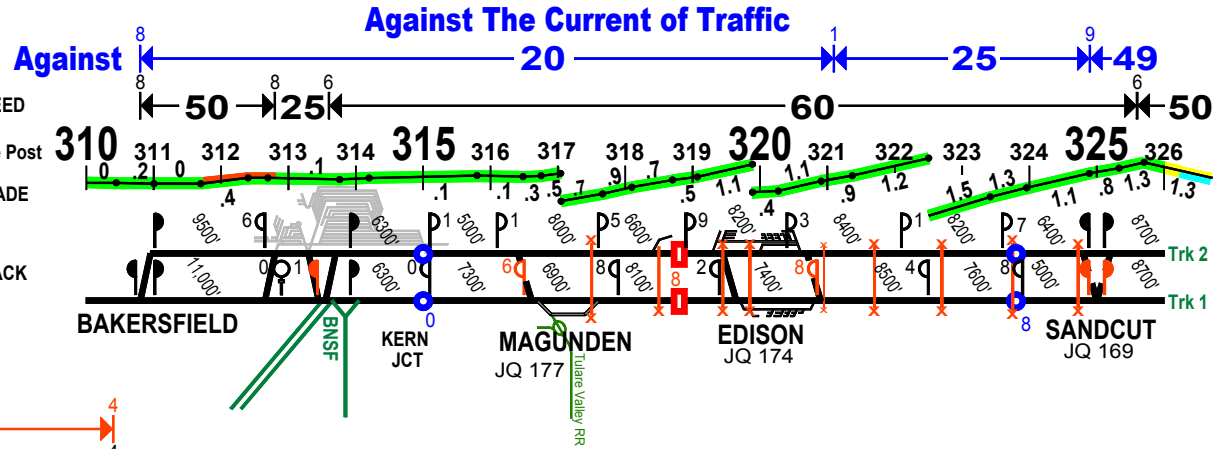

MOJAVE SUB SOUTHBOUND





0940

REFERENCE ONLY
For Learning Purposes
Mistakes GUARANTEED

page 2 of 2

Throttle Modulation Dynamic Braking Automatic Braking Dynamic & Automatic Braking

Submit Suggestions and Corrections
to www.Fogchart.com

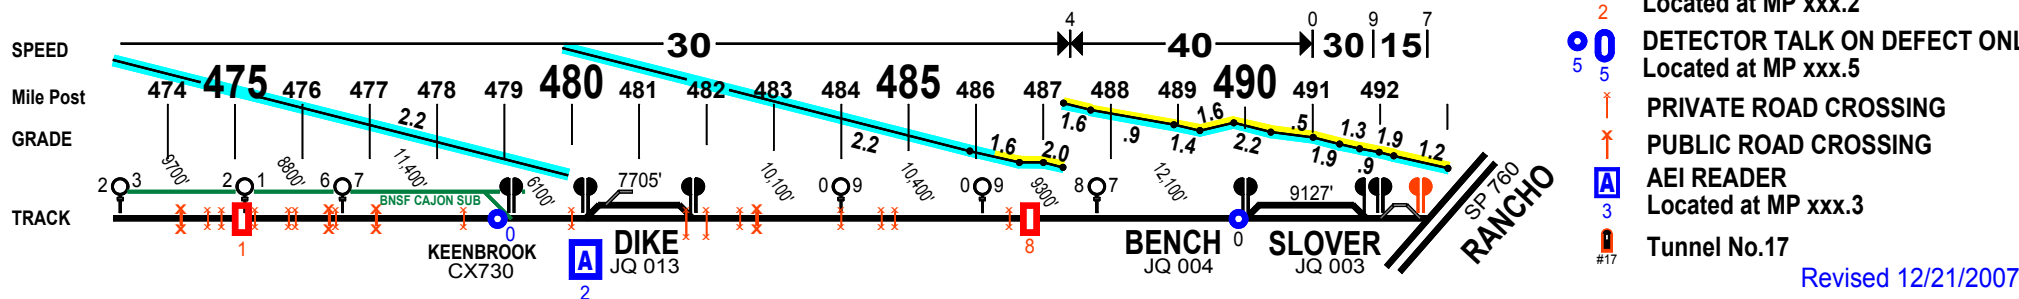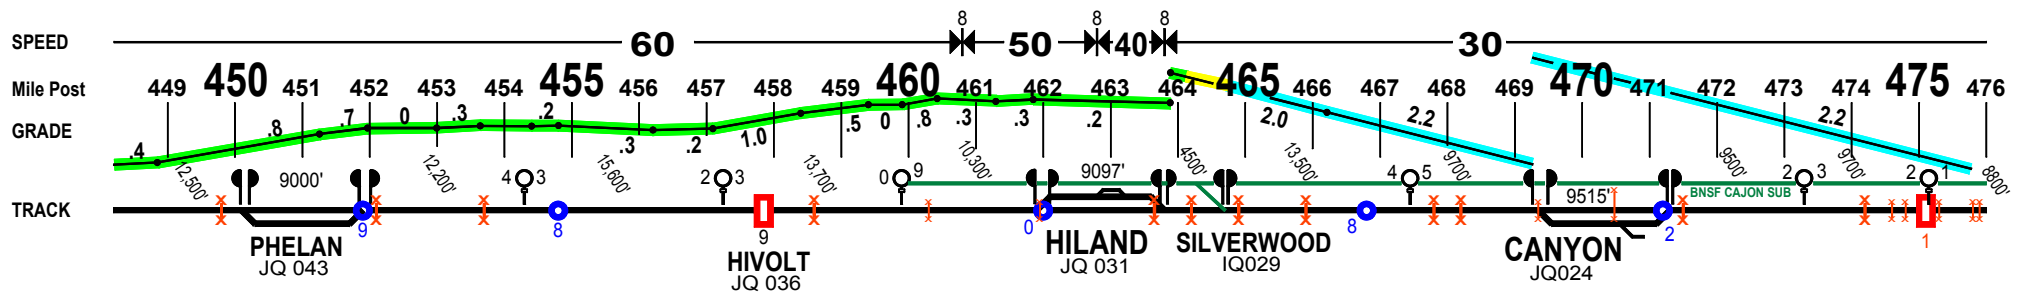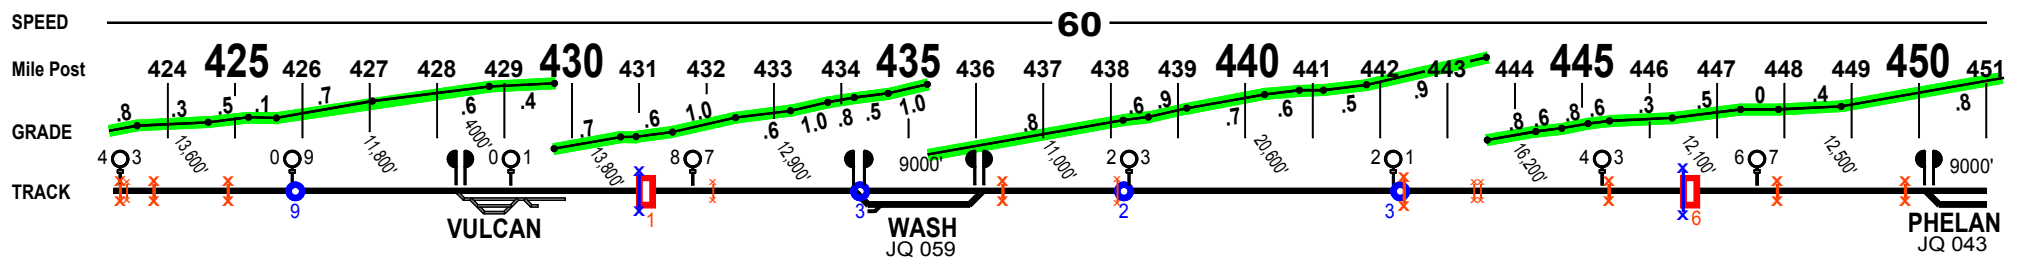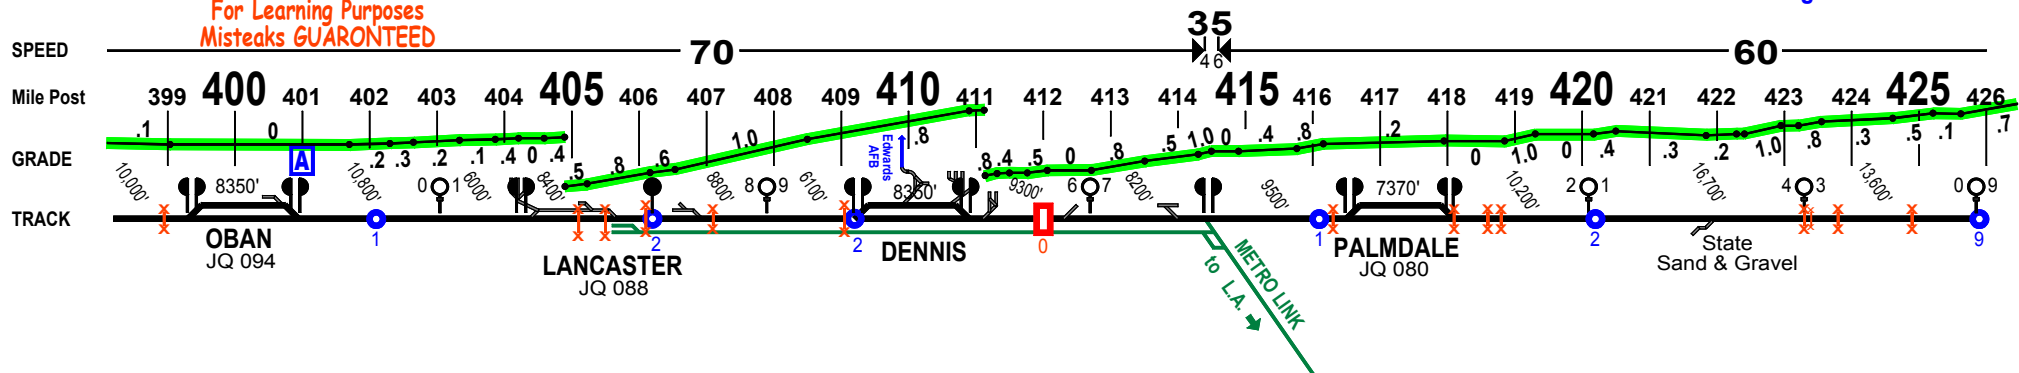

- DETECTOR TALKER (ALWAYS TALKS)
Located at MP xxx.2
- 0 DETECTOR TALK ON DEFECT ONLY
Located at MP xxx.5
- ↑ PRIVATE ROAD CROSSING
- X PUBLIC ROAD CROSSING
- A AEI READER
Located at MP xxx.3
- #17 Tunnel No.17